

bioBidet

Luxury Heated Toilet Seat with Warm Water Spray and Blow Dryer for the Ultimate in Cleanliness and Comfort



EASILY REPLACES MOST STANDARD TOILET SEATS



**Hydraulic
Seat & Lid**



Seat Sensor



Built in Filter



Heated Seat



Power Saving



Feminine Wash



Posterior Wash



Pulsation



Oscillation



Self-Cleaning



Air Drying




Quick Release

The first electronic bidet toilet seat approved by the Water Regulations Advisory Scheme

www.pdshygiene.com E-mail: info@pdshygiene.com
Tel: 01603 426700 Fax: 0800 014 8670



Specification		BB-800	BB-900	BB-1000
Power Rating		Australia or Europe: 220 – 240V~, 50/60Hz , 600 – 700W America or Canada: 120Vac, 60Hz, 660W		
Water inlet type	Type	Direct Inlet flow type		
	Water inlet pressure	0.4 ~ 7.5 kgf/cm ² (5.69 psi ~ 106.7psi)		
Power cord		(1.2m (4 feet): AMERICA) / (1.8m:Australia or Europe)		
Wash Device	Posterior Wash	Max. 1.2 ℓ /min (Max. 0.32 GPM)		
	Feminine Wash	Max. 1.2 ℓ /min (Max. 0.32 GPM)		
	Water Pressure Adjustable	5 Levels		
	Warm Water Temperature	Room Temp ~ 40℃ (Room Temp. 104℉)		
	Heater	600 W		
	Safety Devices	Thermal fuse, Thermal switch, Float switch		
Heated Seat	Temperature	Room Temp ~ 41℃ (Room Temp. ~ 105.8℉)		
	Heater	55 W		
	Safety Device	Thermal fuse		
Warm Air Dryer Device	Adjustable Dry Temperature (Room Temp~45℃)			
	Heater (250W)	●	●	●
	Safety Device (Thermal fuse, bimetal)			
Turbo& Enema Function		●	●	●
Deodorizer		—	●	●
Remote control		—	—	●
Inlet water temperature		3℃ ~ 35℃ (37.4℉ ~ 95℉)		
Ambient Temperature		3℃ ~ 40℃ (37.4℉ ~ 104℉)		
Dimension	Elongated(Control)	Round (Control)	Elongated (Remote)	Round (Remote)
	W : 495mm (19.4 inch) L : 525mm (20.6 inch) H : 165mm (7.28 inch)	W : 495mm (19.4 inch) L : 493mm (19.4 inch) H : 185mm (7.28 inch)	W : 475mm (18.7 inch) L : 525mm (20.6 inch) H : 165mm (7.28 inch)	W : 475mm (18.7 inch) L : 493mm (19.4 inch) H : 165mm (7.28 inch)
Weight (kg)		5.3kg	5.4kg	5.2kg

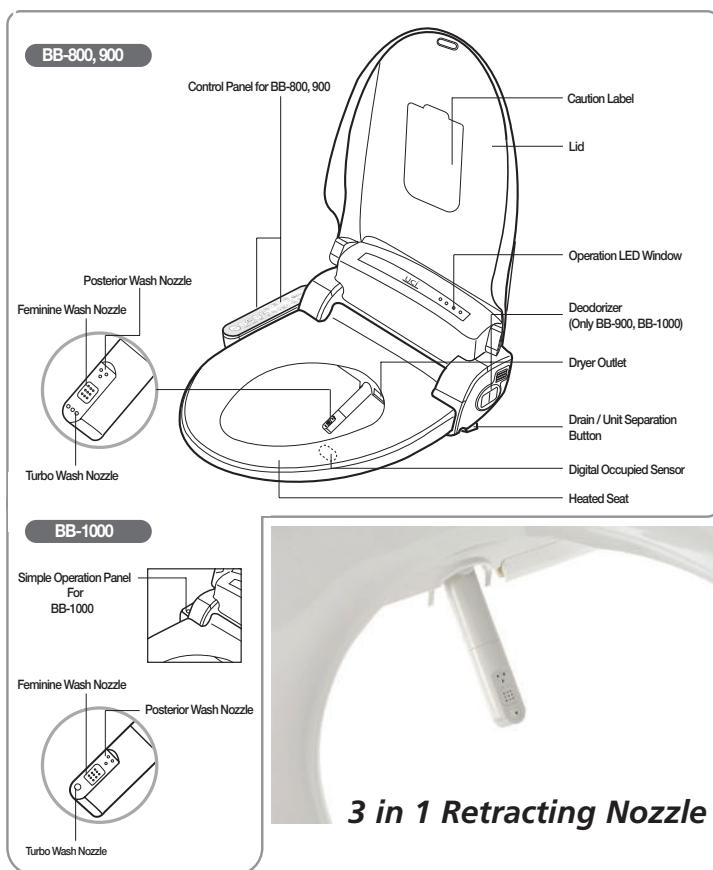

Features:

Side/Remote Control

Heated Seat

Power Saving

Hydraulic Seat

Seat Sensor

Built in Filter

3 in 1 Nozzle

Feminine Wash

Posterior Wash

Turbo Wash

Pulsating Massage

Oscillation

Self Cleaning

Air Drying

Self Diagnosis

Quick Release

Convenient panel to control and operate the various functions

Room Temp ~ 40°C

Two economy options

Gentle closing of seat and lid

Signals that the seat is occupied to commence cleaning operation

Protection against lime-scale build up

Patented nozzle for 3 cleansing programs

Soft aerated water spray for feminine cleansing

Soft yet powerful aerated water spray for thorough cleansing

Whirly mass of soft water spray to stimulate bowel movement

Pulsating and soothing flow of soft water

Oscillating movement of washing nozzle for thorough cleansing

Automatic self cleaning of washing nozzle before and after use

Powerful warm air-drying operation

System warns user of any malfunctions

Quick release mechanism to detach seat from toilet



PDS Hygiene (part of Precision Design Services Limited)
Greyfriars, Greyfriars Close, Old Catton, Norwich NR6 7DX

Tel: 01603 426700 Fax: 0800 014 8670

www.pdshygiene.com E-mail: info@pdshygiene.com